

Chapter 2 Part A

V6 engine

Contents

	Section		Section
Balance shaft - removal and installation.....	See Chapter 2C	Oil pump - removal and installation	13
Camshafts - removal, inspection and installation	11	Oil pan - removal and installation	12
Compression check.....	See Chapter 2C	Rear main oil seal - replacement.....	15
Crankshaft pulley and front oil seal - removal and installation	9	Repair operations possible with the engine in the vehicle.....	2
Cylinder heads - removal and installation.....	8	Rocker arms and lash adjusters - removal, inspection and installation	5
Drivebelt check, adjustment and replacement.....	See Chapter 1	SERVICE ENGINE SOON light on.....	See Chapter 6
Engine mounts - check and replacement	16	Spark plug replacement.....	See Chapter 1
Engine oil and filter change	See Chapter 1	Timing chain and sprockets - removal, inspection and installation	10
Engine overhaul - general information.....	See Chapter 2C	Top Dead Center (TDC) for number one piston - locating	13
Engine - removal and installation	See Chapter 2C		
Exhaust manifolds - removal and installation	7		