

Trim Panel — Front Door

Removal


Note:

High series shown, low series similar.


Note:

The window must be completely down to remove the front door trim panel.


1. On high series front door trim panel, disconnect the battery ground cable (14301).

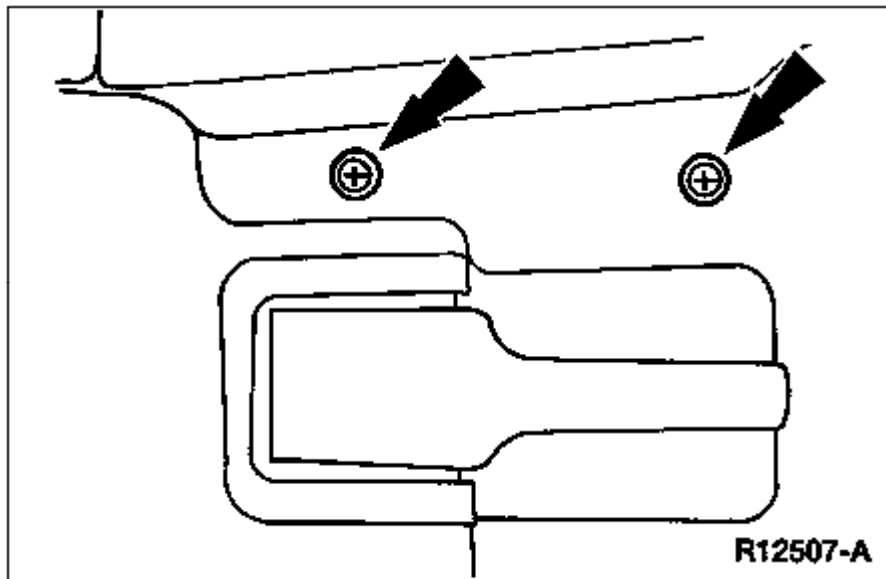


2. Remove the screws.

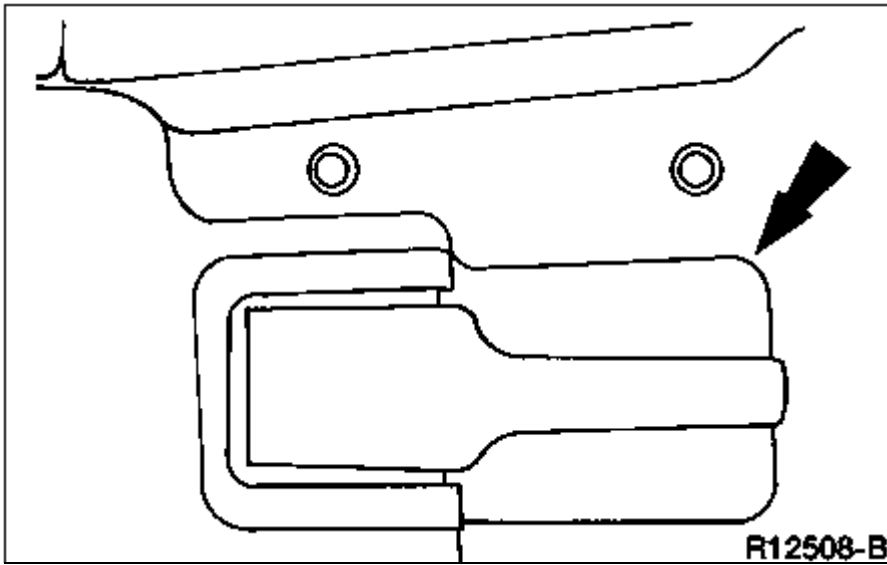

- 3. Remove the inside door handle cup (22634).
- 4. On low series front door trim panel, remove the screw and the window regulator handle.

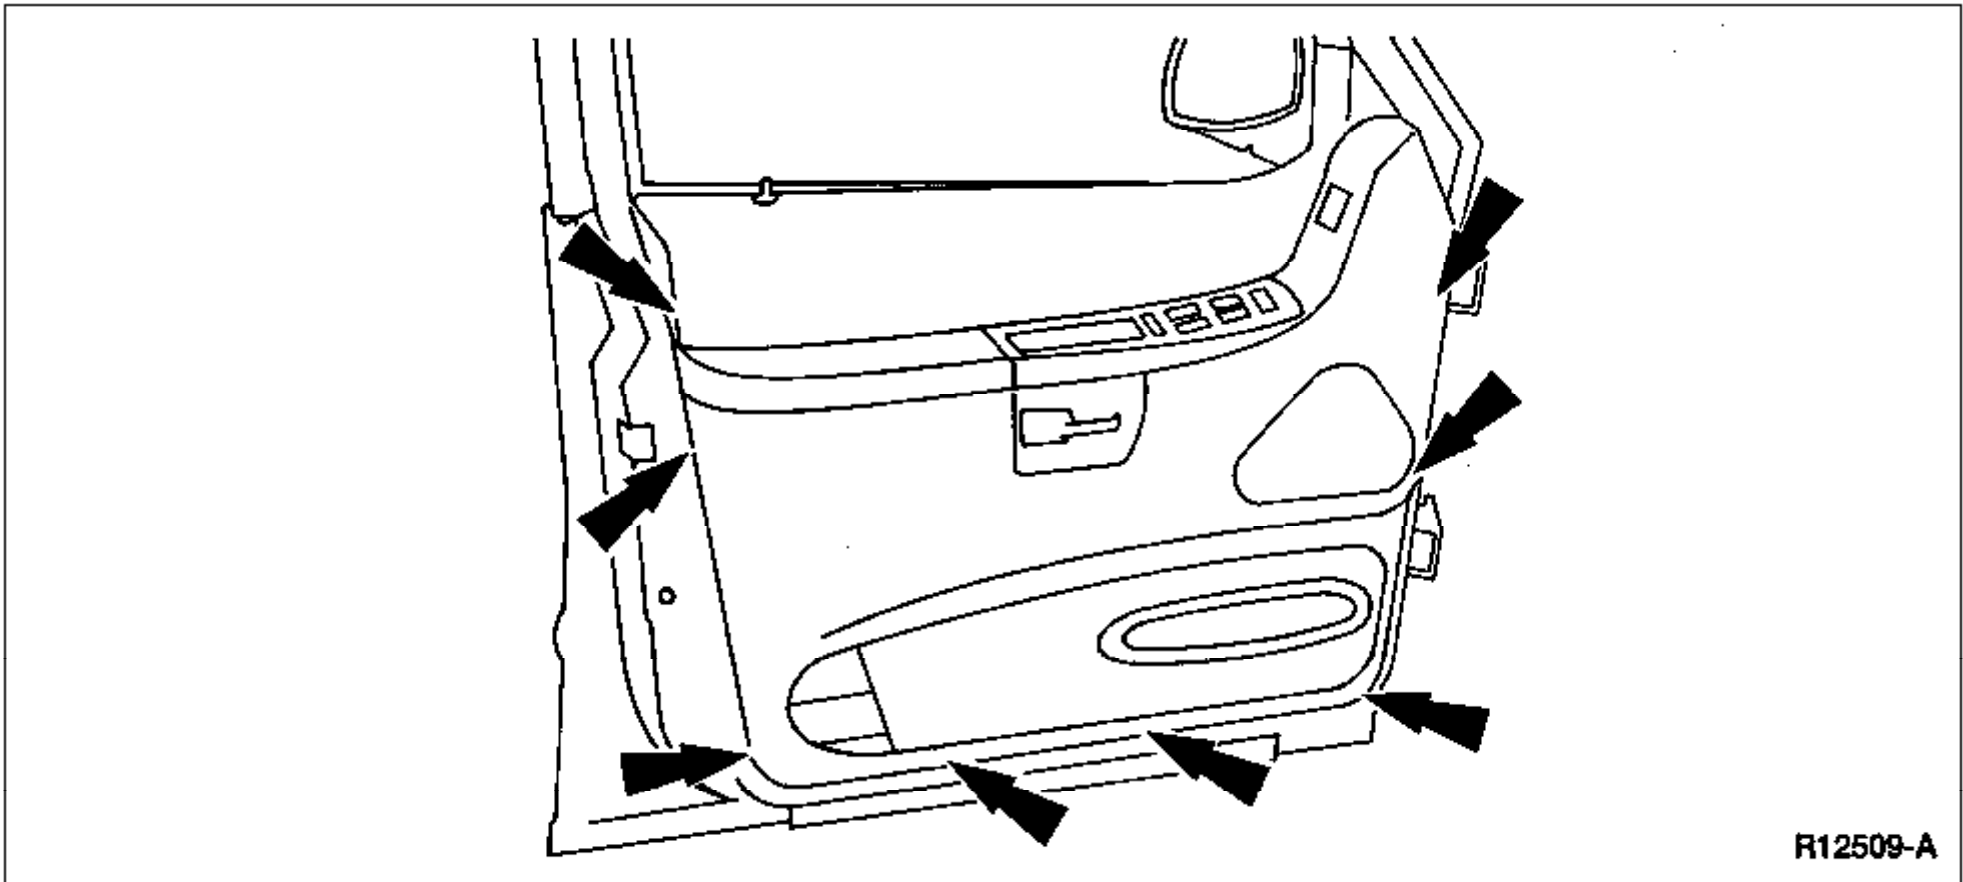


5. Start in a lower corner and work around the panel and separate the front door trim panel (23942) from the front door (20124) to disengage the pin-type retainers.

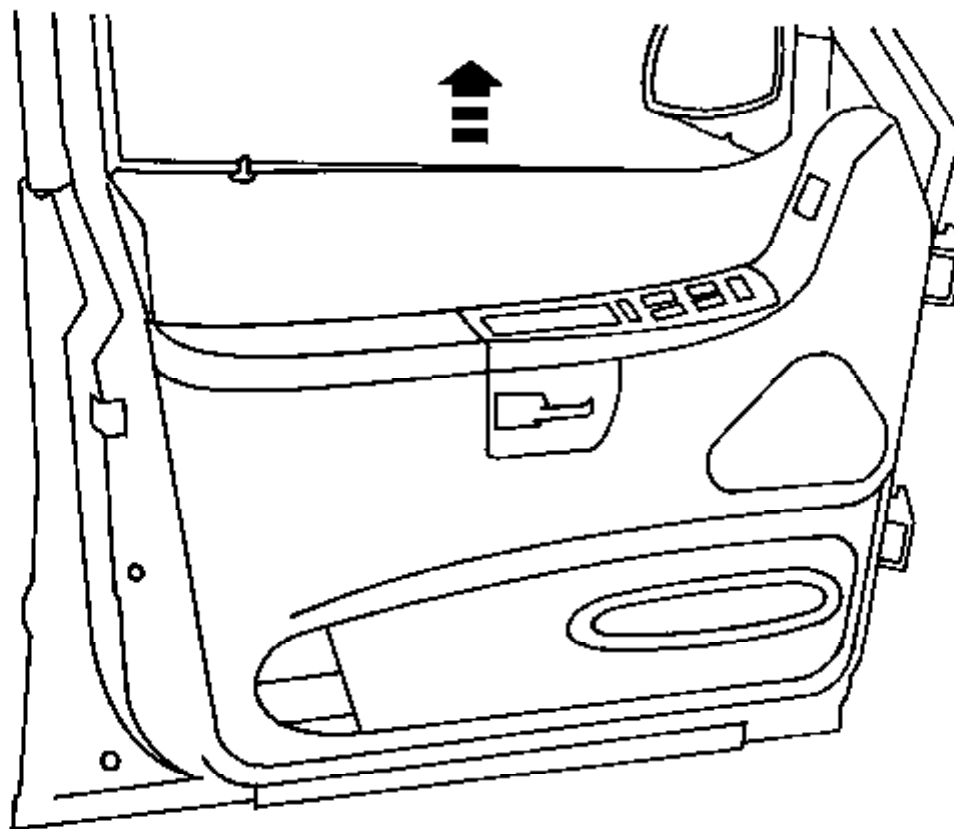


R12510-A

- 6. Lift the front door trim panel to disengage the top lip from the weatherstrip.
- 7. Position the front door trim panel aside.

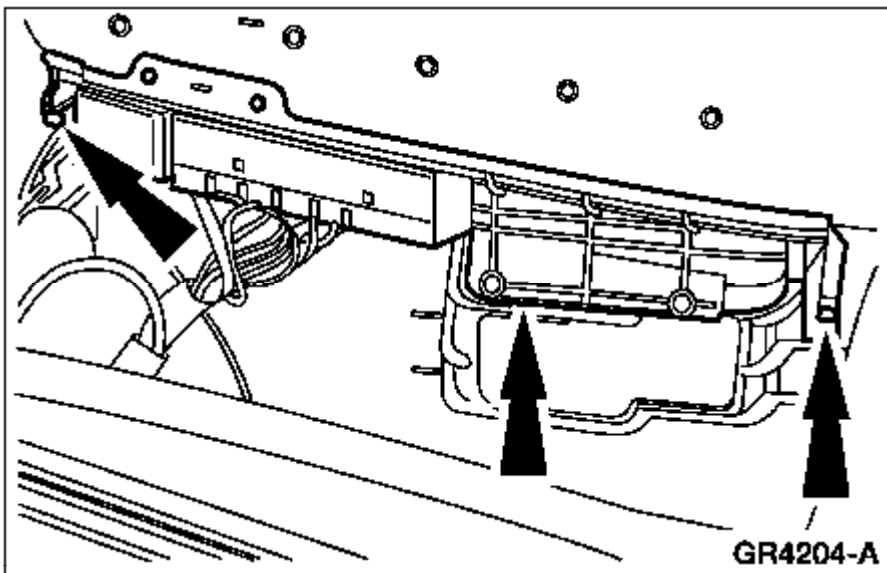

8. Separate the power window switch finish panel from the door trim panel.
- Release the locking tabs.

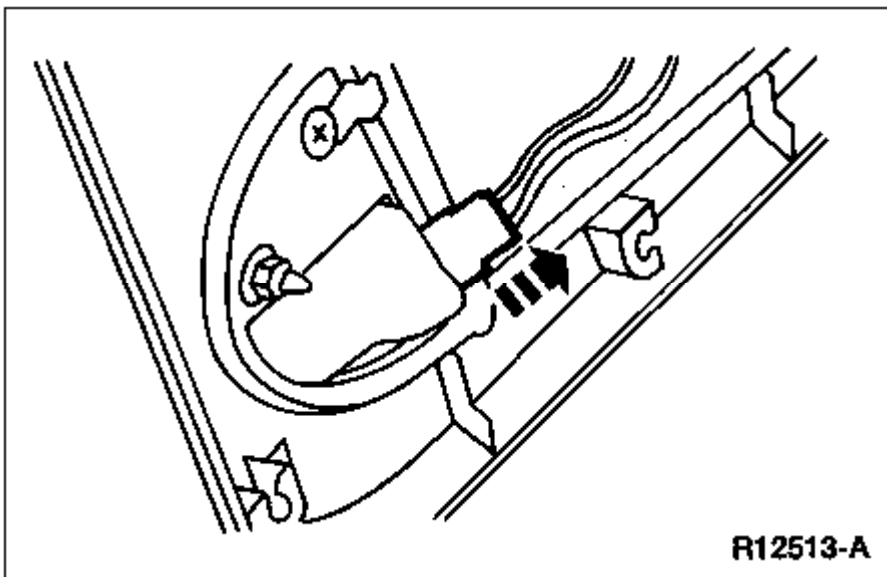

9. If equipped, remove the courtesy lamp bulb from the lens and remove the front door trim panel.

Installation

1.

Note:

When the battery (10653) is disconnected and reconnected, some abnormal drive symptoms may occur while the vehicle relearns its adaptive strategy. The vehicle may need to be driven 16 km (10 mi) or more to relearn the strategy.

To install, reverse the removal procedure.
